


In order to keep your cero product fully functional at all times and maintain the validity of the warranty, there are a few points you should observe. We have listed these for you below.

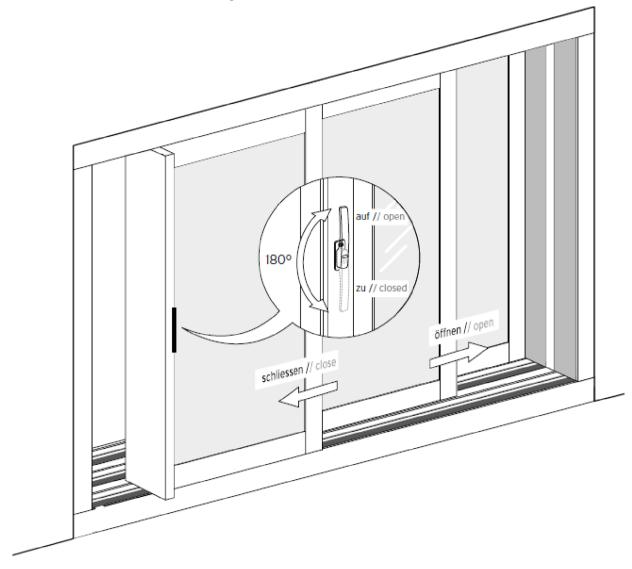

1 | Operating the system in accordance with your briefing and the operating instructions.

2 | Clean the bottom running and guide rails regularly to remove any debris.



3 | Any foreign bodies that obstruct water drainage in the floor track must be removed immediately in order to prevent damage. The same applies during the winter months: Ice and snow can also prevent water drainage, and must be removed from inside and in front of the floor track.



General notes

The battery on the control unit must be replaced at least every 2 years. We also recommend signing a separate maintenance agreement so that your system can be inspected regularly by a specialist. The maintenance intervals contained therein must always be observed in order to maintain the product's long service life.

